



# USER MANUAL



**MODEL NO: ITV201P**

**ITEM NO: HO-WT-2Z**

Save the user manual for future reference  
If you have any questions, please contact us to get support  
([support@inkbird.com](mailto:support@inkbird.com))



Scan To View Setup Video

## WARM TIPS

### PLEASE READ BEFORE USING



Don't use the water timer when the temperature is below 37°F(3°C), and please store the timer indoors to avoid potential freezing damage.



The filter traps dirt particles, preventing them from entering the timer and causing clogging. Please clean the filter regularly and replace it if worn.



To ensure a longer lifespan, please use 2 new AAA alkaline batteries (not included). Don't mix new and old alkaline, standard (carbon-zinc), or rechargeable batteries.



Please activate the water timer before first use or after a period of inactivity (Refer to page 6: **ACTIVATE THE TIMER BEFORE USE**) .




Only use with clean cold water.


# CONTENTS

<b>PRODUCT OVERVIEW</b> .....	01-03
BUTTON FUNCTION .....	01
DIAL POSITION FUNCTION .....	02
LCD ICON FUNCTION .....	02
SPECIFICATION .....	03
<b>PRODUCT INSTALLATION</b> .....	04-05
INSTALLING THE BATTERIES .....	04
INSTALLING THE TIMER .....	05
<b>ACTIVATE THE TIMER BEFORE USE</b> .....	06
<b>PROGRAMMING THE TIMER</b> .....	07-15
STEP 0: UNDERSTANDING ZONES .....	07
STEP 1: SET CLOCK .....	08
STEP 2: START TIME .....	09
STEP 3: HOW LONG .....	10
STEP 4: HOW OFTEN .....	11-12
STEP 5: VIEW SET .....	13-14
STEP 6: AUTOMATIC WATERING .....	15
<b>ADDITIONAL FUNCTIONS</b> .....	16-18
RAIN DELAY MODE .....	16
MANUAL/HAND WATERING .....	17-18
<b>USE ONLY ONE OF THE ZONES</b> .....	19
OFF MODE .....	19
BATTERY STATUS .....	19
<b>TROUBLESHOOTING</b> .....	20-21
<b>CLEANING YOUR TIMER</b> .....	22
<b>WARNINGS</b> .....	23
<b>WARRANTY</b> .....	24
<b>CUSTOMER SERVICE</b> .....	24

# PRODUCT OVERVIEW

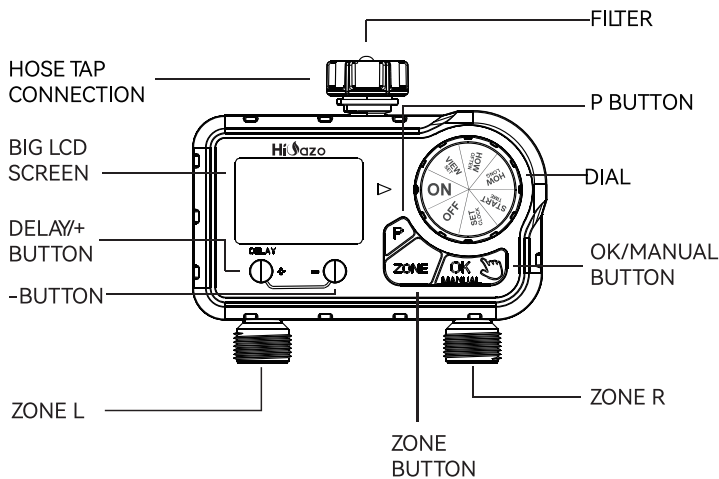

BUTTON	FUNCTION
+ /DELAY BUTTON	Use "+" to adjust the time. When the dial is turned to "ON", press and hold "DELAY" to activate Rain Delay.
- BUTTON	Use "-" to adjust the time.
P BUTTON	Use "P" to switch watering plans <b>P1, P2, P3</b>
ZONE BUTTON	Switch between ZONE L and ZONE R
OK / MANUAL BUTTON	Use "OK" to confirm the time. When the dial is turned to "ON", press and hold "MANUAL" to water manually.

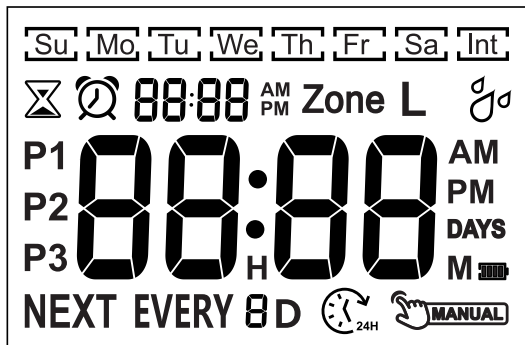

LCD ICON	FUNCTION
	Low battery indicator
	The selected day of the week
	Enter Every_Day watering mode
L	ZONE L (left zone)
R	ZONE R (right zone)
<b>P1/P2/P3</b>	The watering plans P1, P2, P3
	The watering start time
	The watering duration
<b>EVERY 2D</b>	The watering frequency (every 2 days)
	Rain Delay 24H, 48H or 72H
	Manual watering (1 minute to 8 hours)
	Flashes when watering

## SPECIFICATION

Working Water Pressure	0.5bar-8bar (7.25 psi-116.03 psi)
Max Flow Rate	10 Gal/Min (35L/Min)
Waterproof Level	IP54
Working Temperature	37.4°F-122°F (3°C-50°C)
Watering Frequency	Every 2/3/4/5/6 days or the day of the week
Watering Duration	From 1 minute to 3 hours 59minutes (4 hours)
Water Inlet	NH (US) for 3/4" taps BSP(EU) for 3/4" or 1" taps
Water Outlet	For 3/4" standard garden hose
Rain Delay	24H, 48H or 72H
Power By	2 AAA (1.5V) alkaline batteries (Not Included)


## DIAL POSITION

## FUNCTION

SET CLOCK	Switch 12H/24H and set the current time
START TIME	Select what time you would like to start watering
HOW LONG	Determine how long to water for each zone(watering duration)
HOW OFTEN	Choose how often you will water for each zone (watering frequency)
ON	Each ZONE of the timer will automatically water according to the watering plan you set
OFF	Turn off all watering plans

# PRODUCT INSTALLATION


## INSTALLING THE BATTERIES

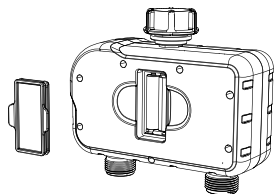

1. Remove the battery tray on the back of the timer
2. Insert 2 new AAA (1.5V) alkaline batteries (not included).
3. Put the battery tray back on the timer and press tightly to make sure it is completely sealed.


Install the battery tray securely after installing the battery to ensure waterproofing.

### **⚠ Note:**



- When the timer is not used for a long time, please remove the batteries and dispose of them properly.
- Replace batteries when the low battery indicator  appears on display. After you done it, please remember to reset your watering plans.
- Don't dispose of batteries in fire. Batteries may explode or leak.
- To ensure a longer lifespan, please use 2 new AAA alkaline batteries (not included). Don't mix new and old alkaline, standard (carbon-zinc), or rechargeable batteries.




## INSTALLING THE TIMER

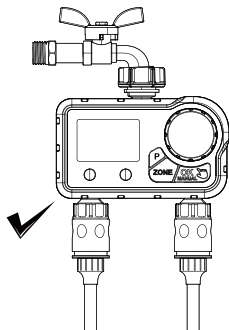

- 1) Turn off the garden faucet.
- 2) Wrap Teflon Tape around the faucet threads.
- 3) Screw the timer to the garden faucet and make the display as vertical as possible to the ground to prevent rainwater from accumulating and leaking into the interior.
- 4) Wrap Teflon Tape around the threads of the timer outlet.
- 5) Screw the garden hose to the timer outlet.
- 6) Turn on the faucet after programming the timer.

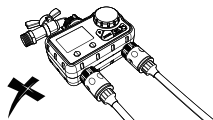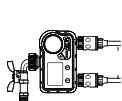

**Tips:** If the connection between the timer and the faucet or hose is not tight or leaking, wrap more Teflon Tape(thread seal tape) to make them tight.

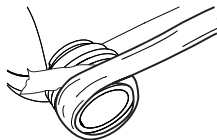


### Note:

- ⊗ Please do not use tools, only install the timer by hand.
- ⊗ When expecting freezing temperatures, timers should be removed from the hose faucet and stored indoors to avoid potential freeze damage.
- ⚠ Please install the filter properly and keep it clean as follows.



## ACTIVATE THE TIMER BEFORE USE

- !** Please activate the device before using it for the first time or after a period of inactivity.

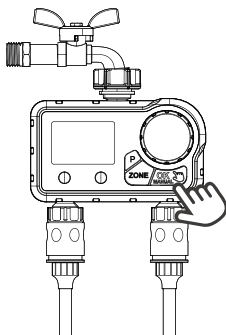

### Activation Steps:

1. Keep the garden faucet turned off.
  2. Turn the timer dial to "ON".
  3. Press and hold the "MANUAL" button for 3-5s to enter Manual Watering Mode.
  4. Re-press the "ZONE" button twice to select both ZONE L and ZONE R. When the screen flashes, immediately press the "OK" button to run manual watering.
- A rectangular LCD screen displaying the time '0:57' in large digits. Above the time, 'LR' is displayed with a small 'o' symbol. Below the time, 'M' is displayed with a small 'o' symbol. At the bottom right, there is a small icon of a hand pointing to a button labeled 'MANUAL'.
5. After hearing 2 "click" sounds or waiting for about 5 secs, the valves in the timer is opened, and then turn the dial to "OFF" to close the valves.
  6. Repeat the step 2-5 for 3-5 times.
  7. **Test:** Turn on the faucet a little bit, and then repeat the step 2-5 to check if the water flow out or shut off as expected.

If yes, the timer valve is normal, please use it with confidence!  
 If not, please repeat the above steps several times or contact our support team immediately.

### Note:

When testing, please keep away from the water timer outlet to avoid being splashed and wet.

# PROGRAMMING THE TIMER


## STEP 0: UNDERSTANDING ZONES

This is a two-zone timer allowing you to water two different areas from the same faucet. Each zone can be programmed with independent start time, how long, and how often.

**Note:** Dual zones operating simultaneously have lower water pressure than single zone because the water pressure is divided between the two zones.

### Please design the program separately for each ZONE:

- 1) First, keep ZONE **L** and complete the settings, following the steps 1-4 below. Then turn the dial to "**ON**" to save the changes.
- 2) Press "**ZONE**" button to select ZONE **R**, and follow steps 2-4 to set up. Turn the dial to "**ON**" to save all the plans.

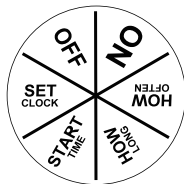
**STEP 1: SET CLOCK**

1. Turn the dial to SET CLOCK.
2. Use the "+" or "-" button to select 12H/24H mode, press "OK" to confirm.
  - 12H mode: with "AM" or "PM"
  - 24H mode: without "AM" or "PM"
3. "00": " flashing: Use the "+" or "-" button to set hour and press "OK" to confirm.  
 ":00" flashing: Use the "+" or "-" button to set minute and press "OK" to confirm.  
 " " flashing: Use the "+" button to select the day of the week, then press "OK" to confirm.  
 "Th." without flashing means "Thursday" has been selected.
4. Turn the dial clockwise to save the changes in this STEP and go to next STEP.

**TIPS:**

1. Press and hold the "+" or "-" button can increase or decrease the time quickly.
2. When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.


## STEP 2: START TIME

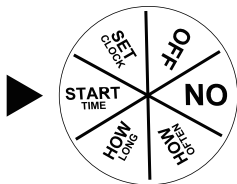

1. Turn dial to **START TIME**
2. Use the "+" or "-" button to set the start time.  
(If you choose 12H mode, please note AM and PM).
3. Use the "OK" button to confirm and switch between hours or minutes.
4. After confirming this plan, press the "P" button to switch watering plans (**P1, P2, P3**)  
(When switching to another plan, the settings from the previous plan are automatically saved).
5. Turn the dial clockwise to save the changes in this STEP and go to next STEP.

### TIPS:



1. Press and hold the "+" or "-" button can increase or decrease the time quickly.
2. If you want to turn off a certain plan, please adjust the start time to "23 : xx" (24-hour mode) or "11 : xx" PM (12-hour mode) when setting the plan. Then press the "+" button again, a flashing "OFF" will appear on the screen. And press "OK" to confirm closing the plan. "OFF" on the screen is always on, indicating that the plan has been turned off.
3. If you want to cancel the "OFF" plan, press the "+" or "-" button again on the plan to set its start time.
4. When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

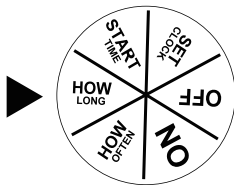**STEP 3: HOW LONG**


1. Turn dial to **HOW LONG**.
2. Use the "+" and "-" button to set the watering duration.  
(The watering duration is from 1 minute to 3 hours 59 minutes)
3. Use the "OK" button to confirm and switch between hours or minutes.
4. After confirming this plan, press the "P" button to switch watering plans (**P1, P2, P3**)  
(When switching to another plan, the settings from the previous plan are automatically saved).
5. Turn the dial clockwise to save the changes in this STEP and go to next STEP.

**TIPS:**

1. Press and hold the "+" or "-" button can increase or decrease the time quickly.
2. If you want to turn off a certain plan, please adjust the watering duration to "00 H 00 M" when setting the plan, a flashing "OFF" will appear on the screen. And press "OK" to confirm closing the plan. "OFF" on the screen is always on, indicating that the plan has been turned off.
3. If you want to cancel the "OFF" plan, press the "+" or "-" button again on the plan to set its watering duration.
4. When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

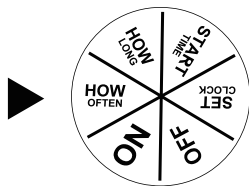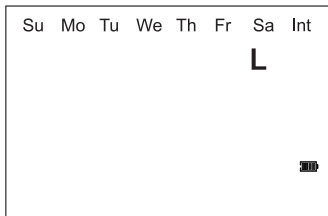**STEP 4: HOW OFTEN**

 1. Turn the dial to "HOW OFTEN".
2. There are 2 setting modes for watering frequency.

**a. Day of the Week Mode**

(Watering plans will run every Sunday, Wednesday, Thursday, and Friday)

**b. Every 2/3/4/5/6 Days Mode**

(Watering plans will run every 2 days)

Examples of watering frequency of every 2 day, every 3 days and every 5 days:

	SUNDAY	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURDAY
<b>EVERY 2 DAY</b>							
EVERY WEEK	☹		☹		☹		☹
<b>EVERY 3 DAY</b>							
WEEK ONE	☹			☹			☹
WEEK TWO			☹			☹	
<b>EVERY 5 DAY</b>							
WEEK ONE	☹					☹	
WEEK TWO				☹			

### 3. Set the **Day of the Week Mode**

- Use the "+" or "-" button to move cursor  to select the watering day, and press the "OK" button to confirm.
- Su means the "Sunday" has been selected. Press "OK" again can cancel the selection.
- Turn the dial clockwise to save the changes in this STEP and go to next STEP.

### 4. Set the **Every 2/3/4/5/6 Days Mode**

 
- Use the "+" button to select "Int", press "OK" to confirm, then you will enter the Every 2/3/4/5/6 Days Mode.
- Use the "+" button to select water every 2/3/4/5/6 days, press "OK" to confirm.
- Turn the dial clockwise to save the changes in this STEP and go to next STEP.

#### **Tips:**

- How to return to the Day of the Week Mode?
  - On the Every 2/3/4/5/6 Days Mode, press the "OK" button twice .
  - Then the "day of the week" will reappear and flash, and the below "Every" will disappear.

#### 2. How to set the water timer to water every day?

If you want to run the watering plans every day, please select every day from Monday to Sunday in the Day of the Week Mode.



(Watering plans will run every day)

- You can only choose one of the two watering frequency modes. Once one of the two is confirmed, the other will be eliminated.
- The 3 watering plans will use the same watering frequency.
- When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.



## STEP 5: VIEW SET


1. Turn the dial to "VIEW SET".
2. Press the "P" and "ZONE" buttons to check all settings for different plans or zones.

TIPS: This is a multi-schedule 2-zone watering timer.

- Each zone can be set 3 different watering plans.
- Each watering plan can be set with a different start time and watering duration.
- But there is only one watering frequency per zone. That means the 3 watering plans under the zone will all run on the same day.

### For example:

1. The setting of P1, P2, P3 for ZONE L

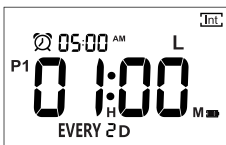

1



2




3


1. (P1 start watering at 5:00AM, and last for 1 hour)
2. (P2 start watering at 9:30AM, and last for 30 minutes)
3. (P3 no watering schedule)

**The ZONE L will be watered twice every 2 days. The first time starts at 5:00 am and waters for 1 hour; the second time starts at 9:30 am and waters for 30 minutes.**


## 2. The setting of P1, P2, P3 for ZONE R

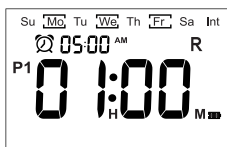

1

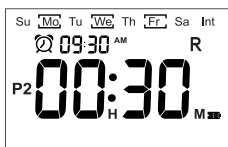

2


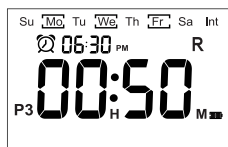


3


1. (P1 start watering at 5:00AM, and last for 1 hour)
2. (P2 start watering at 9:30AM, and last for 30 minutes)
3. (P3 start watering at 6:30PM, and last for 50 minutes)

**The ZONE R will be watered 3 times every Monday, Wednesday and Friday. The first time starts at 5:00 am and waters for 1 hour, the second time starts at 9:30 am and waters for 30 minutes, and the last time starts at 6:30 pm and waters for 50 minutes.**

## STEP 6: AUTOMATIC WATERING

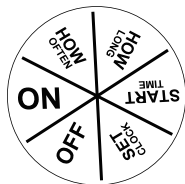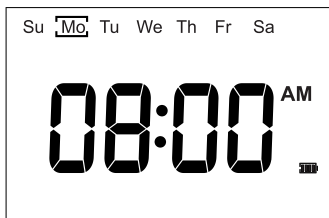

1. Turn dial to "ON".
2. The LCD screen will alternately display the current time and the next watering start time in ZONE L and ZONE R.

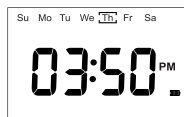

Current time



Next watering start  
time in ZONE L



Next watering start  
time in ZONE R

### CONGRATULATIONS!

Your timer has now been programmed successfully!

It will automatically start watering based on the programmed start time, duration and frequency.

**Now you can keep the faucet open and trust the timer to water!**

## ADDITIONAL FUNCTIONS


### RAIN DELAY MODE



Turn the dial to "ON", press and hold the "DELAY" button 3-5 seconds



Press the "+" or "-" button to adjust the delay watering time(24H, 48H, or 72H)

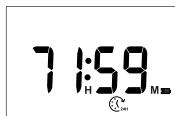

Press the "OK" button to start rain delay


Rain delay allows you to postpone watering on both zones for a set period of time without interrupting your set watering schedule. To access the rain delay, follow the steps below.

- 1) Turn the dial to "ON", press and hold the "DELAY" button for 3-5s to enter the rain delay mode.
- 2) In rain delay mode, you can find the option "24H" flashing on the screen. Press "+" and "-" button to select delay periods of 24H, 48H, and 72H.
- 3) Press the "OK" button to run the delay function, then the screen will show a countdown of the remaining delay.
- 4) To cancel the rain delay, turn the dial to "ON", then press and hold the "DELAY" button for 3-5s again to resume your programmed watering schedule.

#### Note:

1. Please remember to press the "OK" button after selecting the rain delay time to start the rain delay program. Otherwise, the rain delay setting will automatically exit after the screen flashes for 3-5s.

## MANUAL/HAND WATERING

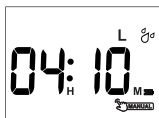

Turn the dial to "ON", press and hold the "MANUAL" button 3-5s



Press the "ZONE" button to select the zone to be watered



Press the "+" or "-" button to adjust the manual watering time



Press the "OK" button to start manual watering

This function allows you to manually water without interrupting your set watering schedule. To access this feature, please follow the steps below.


1. Turn the dial to "ON".
2. Hold the "MANUAL" button for 3-5s to enter the Manual Watering Mode.
3. Select the ZONE which you would like to program by pressing the "ZONE" button.
  - ZONE L is selected by default. Press the "ZONE" button once to select only ZONE R.
  - Press the "ZONE" button twice to select both ZONE L and ZONE R.




ZONE L only



ZONE R only

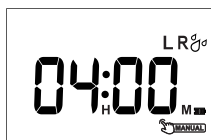

ZONE L and ZONE R

4. Use the "+" or "-" button to adjust the manual watering time from 1 minute to 8 hours. Press "OK" to confirm and switch between hours or minutes. (The default manual watering time is 10 minutes).
5. After setting the watering time, press the "OK" button immediately within 5 seconds to start manual watering and the pattern  will be displayed on the screen.
6. If you need to stop the manual watering, please hold the "MANUAL" button for 3-5s to exit the manual watering mode and restore the original watering program. (Or you can turn the dial to "OFF" to stop the manual watering, but please remember to turn the dial to "ON" again to restore the original watering program.)

#### NOTE:

1. Please remember to press the "OK" button after setting the manual watering time to start manual watering. Otherwise, the manual watering setting will be automatically exited after the screen flashes for about 3-5s.

## USE ONLY ONE OF THE ZONES



If you want to use only ZONE L and close ZONE R, please set it up as follows.

- 1) Turn the dial to **"Start Time"** and press **"Zone"** to select ZONE R.
- 2) Press **"P"** button to switch Plan, then press the **"+"** or **"-"** button to adjust the Hour until the screen displays OFF.
- 3) Turn the dial to **"ON"** to save the changes.

\* If you only want to use ZONE R and close ZONE L, the same applies.

### TIPS:

1. If you need to turn off only one ZONE completely, the P1, P2, and P3 of the ZONE need to be set to the **"OFF"** state at the same time, otherwise, the plans that are not set to the **"OFF"** state will continue to work.

## OFF MODE



- 1) If you wish to stop all watering plan for an extended period, turn the dial to **"OFF"**. (Your settings are saved)
- 2) The timer will not water automatically while in OFF mode. (The screen will display the word OFF in large letters)
- 3) To start watering automatically again, turn the dial back to **"ON"** to resume your programmed watering schedule.

## BATTERY STATUS

Battery status will be displayed as following:



Full



LOW Power

### Note: NOTE

When the low battery indicator  appears on display. The valve will close automatically to avoid leakage. Please replace the battery in time in case of interrupting normal operation.

# TROUBLESHOOTING

Problem	Possible Cause	Possible Solution
The water inlet leakage	<ol style="list-style-type: none"> <li>1. No filter or not be placed horizontally</li> <li>2. The faucet is not the standard 3/4"</li> </ol>	<ol style="list-style-type: none"> <li>1. Add a filter and make sure it's placed horizontally in the inlet.</li> <li>2. Make sure the faucet is a standard 3/4" faucet.</li> <li>3. Wrap Teflon tape on the tap making it tight.</li> </ol>
The water won't stop/ flow out	<ol style="list-style-type: none"> <li>1. Long time in storage and transportation make the valve inactive</li> <li>2. Valve blockage</li> </ol>	<ol style="list-style-type: none"> <li>1. Keep the tap turned off and turn the timer dial to ON.</li> <li>2. Run the manual watering for 5-7s and stop it.</li> <li>3. Repeat the Step 2 for 3 to 5 times.</li> <li>4. Try using it normally.</li> </ol>
No response for manual /rain delay function	<ol style="list-style-type: none"> <li>1. After setting manual watering or rain delay time, press the "OK" button again</li> </ol>	<ol style="list-style-type: none"> <li>1. After the time setting is completed, there is no need for any operation, wait for five seconds, and the program will start automatically.</li> </ol>
Short battery life	<ol style="list-style-type: none"> <li>1. Mixed use of old and new batteries</li> <li>2. Use the carbon batteries or rechargeable batteries</li> </ol>	<ol style="list-style-type: none"> <li>1. Use new alkaline batteries.</li> <li>2. Rechargeable batteries and carbon batteries have a short life, use the alkaline batteries instead of them.</li> </ol>



<p>Low water pressure</p>	<ol style="list-style-type: none"> <li>1. Filter blockage</li> <li>2. Inlet pressure not sufficient to support watering</li> </ol>	<ol style="list-style-type: none"> <li>1. Check if the filter is clogged, if so, clean or replace the filter.</li> <li>2. Make sure the timer is installed properly and not cross-threaded.</li> <li>3. Installation of a booster pump or other auxiliary equipment of increasing pressure.</li> </ol>
<p>LCD screen does not display</p>	<ol style="list-style-type: none"> <li>1. The battery is exhausted</li> <li>2. The display is exposed to direct sunlight</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace new 2*AAA alkaline batteries and installed correctly.</li> <li>2. Avoid direct sunlight, and observe if the battery is too low.</li> </ol>
<p>Dial or button problems</p>	<ol style="list-style-type: none"> <li>1. The dial/valve is stuck</li> <li>2. Accidentally holding the OK button while inserts the batteries</li> </ol>	<ol style="list-style-type: none"> <li>1. Same procedure as above.</li> <li>2. Turn the dial to the OFF to check if the valve can be closed.</li> </ol>
<p>The timer does not water</p>	<ol style="list-style-type: none"> <li>1. The dial turn to OFF position</li> <li>2. The faucet is not turned on</li> <li>3. The battery is dead, it shuts down automatically</li> <li>4. Rain delay is ON</li> </ol>	<ol style="list-style-type: none"> <li>1. Rotate the dial to ON position.</li> <li>2. After finishing all settings, turn on the faucet.</li> <li>3. Replace with new alkaline batteries.</li> <li>4. Waiting for the plan to resume again.</li> </ol>

Still have trouble with setup, please scan the QR code to view the setup video.

If the user manual doesn't have you're looking for or need some help, please prepare the order Id and contact us before returning the product to the store.


E-mail: [support@inkbird.com](mailto:support@inkbird.com)

## CLEANING YOUR TIMER


After a period of use, impurities or dirt in the water may accumulate in the timer. Therefore, the timer should be cleaned regularly to ensure its proper operation.

Please follow these steps to clean the timer.

1. Turn off the garden faucet and remove the timer. Check whether the filter at the timer water inlet has accumulated impurities.
2. If the filter is dirty, please take it out of the timer and rinse it with running water.

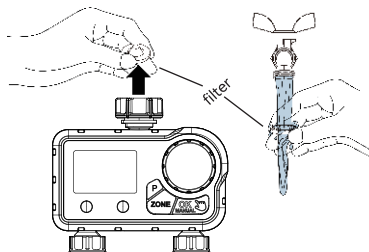

3. Turn on the Manual Watering Mode of the timer to open the valve and check whether the water pipe of the timer is blocked. If it is blocked, please clean it gently with a small cleaning brush.

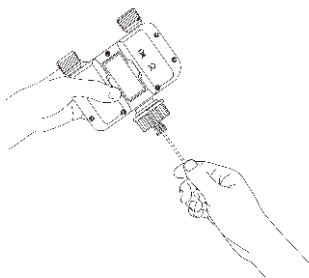

## WARNINGS

- 1) For outdoor use only. Placing the timer in the sheltered outdoors will prolong its lifetime.
- 2) To avoid damage, please tighten it without using tools.
- 3) The filter should be placed horizontally in the water inlet to prevent leakage.
- 4) When low power, please replace the batteries to avoid the interruption of normal operation; when replacing the batteries, please make sure that the battery tray is dry.
- 5) When the timer is not in use, please remove the batteries and store it indoors.
- 6) Don't use the timer under the temperature more than 120°F(50°C), or less than 38°F(3°C).
- 7) Don't subject the product to extreme force and shock.
- 8) Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Never immerse the product in water.

This product is MADE IN CHINA and conforms to the national standards of the United States, Britain, Germany and France. Please use this product correctly. If it needs to be discarded, please properly dispose according to the national requirements. Please protect the environment.



Points de collecte sur [www.quefairede mesdechets.fr](http://www.quefairede mesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

## WARRANTY

This product carries a 1-year warranty against manufacturing defects in materials and workmanship from the date of purchase.

During the warranty period, we'll replace free of charge the product found to be defective under reasonable use and service as determined sold by HiOazo.

To place a warranty request, please email us with your order ID and purchased store at [support@inkbird.com](mailto:support@inkbird.com).

## CUSTOMER SERVICE

If it doesn't work and you want to return or replace it, please contact us for support during the warranty period.

E-mail: [support@inkbird.com](mailto:support@inkbird.com)

## INKBIRD TECH.C.L.

[support@inkbird.com](mailto:support@inkbird.com)

**Factory address:** 6th Floor, Building 713, Pengji Liantang Industrial Area, NO.2 Pengxing Road, Luohu District, Shenzhen, China

**Office address:** Room 1803, Guowei Building, NO.68 Guowei Road, Xianhu Community, Liantang, Luohu District, Shenzhen, China

<b>EC</b>	<b>REP</b>
-----------	------------

Like Sun GmbH

Planckstr. 59, 45147 Essen, Nordrhein-Westfalen, Germany

Email: [ec-connection@web.de](mailto:ec-connection@web.de)

<b>UK</b>	<b>REP</b>
-----------	------------

TANMET INT'L BUSINESS LTD

9 Pantygraigwen Road, Pontypridd, Mid Glamorgan, CF37 2RR,UK

Email: [tanmetbiz@outlook.com](mailto:tanmetbiz@outlook.com)